PROGRAMME CHART

Whirlpool is a registered trademark of Whirlpool U.S.A.

Important:

- **If a fault occurs or you wish to change the current programme, press the On/Off push button or push in the push/pull knob (depending on the model) ! Refer to the "Troubleshooting guide" in the user instructions to remedy any problems.**
- **If you switch off the dishwasher during a wash cycle, when switched on again the dishwasher resumes the cycle from where it was interrupted.**

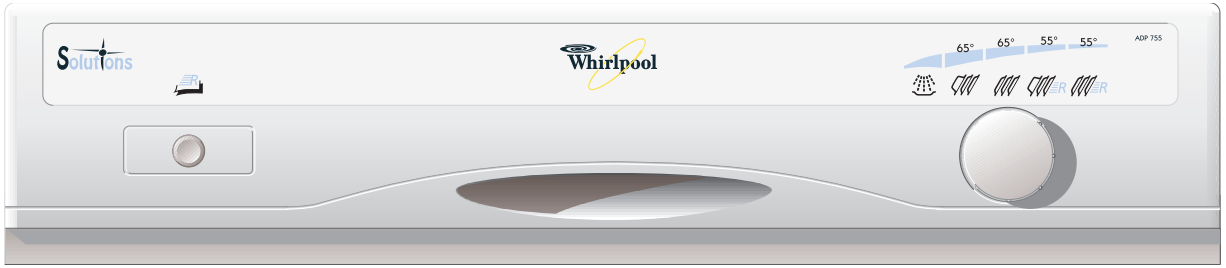

Rapid
To be pressed on if a rapid cycle is required, after having selected the relevant Rapid or Eco Programme.

	Programme Number & Symbol	Load Crockery and cutlery	To obtain Rapid Programmes/Cycles press button:	Final rinse temperature:	Detergent dispenser: +) with pre-wash -) without pre-wash		Consumption ***		
							Normal load		
					** Small compartment	Large compartment	Water (Liter)	Energy (kWh)	Time (Min.)
1	**Pre-wash**	Crockery to be washed later.	-	-	-	-	-	-	-
2	**Normal 65° C**	Normally or heavily soiled crockery.	-	65° C	-	+	26	1.75	115
3	**Daily 65° C**	Normally soiled crockery.	-	65° C	-	+	-	-	-
4	**Eco 55° C**	Soiled crockery with no-dried-on food.		55° C	-	+	-	-	-
5	**Rapid 55° C**	Lightly soiled crockery with no dried-on food and without starch remains.		55° C	-	+	-	-	-

**) For pre-wash.
***) Values for normal conditions. Values may vary in relation to usage, e.g.: different loads, water temperatures, water hardness and power supply voltage.

Daily check list:

1. Turn on the tap.
2. Arrange crockery so that items do not touch each other.
3. Make sure the water jet can reach all loaded items and that the spray arms turn freely.
4. Fill the detergent dispenser and check the salt and rinse aid levels.
5. Close the dishwasher door.

Tips:

Crockery:
- Load crockery upside down on the racks.

Cutlery:
- The cutlery basket can be removed to increase available space.
- Place the cutlery unsorted in the cutlery basket with the handles positioned downwards.
- To avoid the risk of injury on sharp knives and forks, cutlery can also be placed in the basket with the handles positioned upwards.

Cups:
- Load cups at an angle to facilitate water circulation.

Silver cutlery:
- Always hand wash silver cutlery immediately after use. Follow the detergent manufacturer's directions on the detergent pack.

Important:
- **Only load the appliance with dishwasher-proof crockery and cooking utensils.**
- Certain wooden and aluminium articles may discolour.
- Glued, plastic utensils may be heat sensitive.
- Tin may become dull.
- Decorated crockery (unglazed) may fade.
- Glasses may become dull.

Quick Reference Guide

Also refer to the “Dishwasher Loading Instructions” which contain detailed information and useful tips.

GB

HOW TO USE THE DISHWASHER

Close the dishwasher door and turn on the water tap.

1. Select the programme required by turning the **programme selector knob**. If required, select any additional functions.

2. Pull out the **programme selector knob** to start the programme.

3. To change the previously selected programme push in the **programme selector knob** to stop the programme. Turn the **programme selector knob** clockwise to the required programme. Pull out the **programme selector knob** to start the programme. If required, select any additional functions.
   Note: If the dishwasher is switched off during a wash programme, when switched on again the dishwasher resumes the wash cycle from where it was interrupted.

4. To switch the dishwasher off turn the **programme selector knob** clockwise to the **Stop** position and push it in.

Open the door and unload first the lower rack, then the upper one.

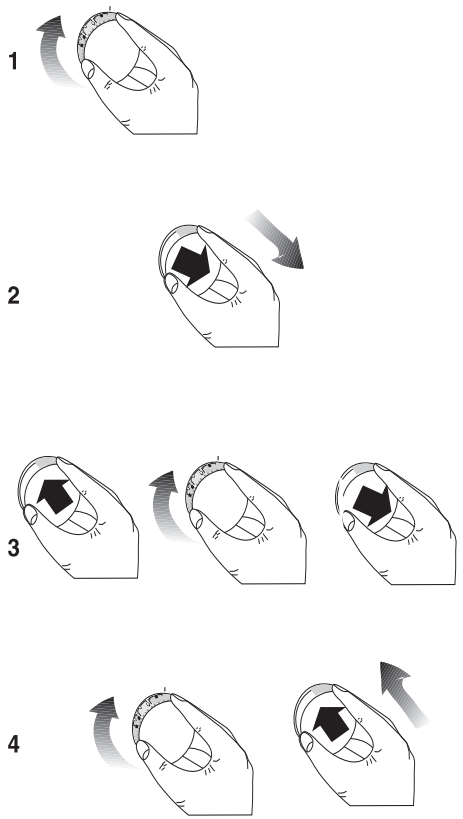

Upper rack

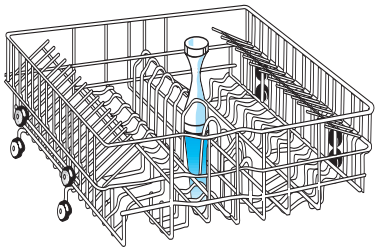

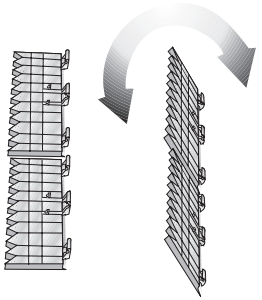

Height adjustment with empty rack only:

- Release the caps of the rack rails.
- Take the rack out and re-insert it using either the upper or lower roller pairs as required.
- Close the caps.

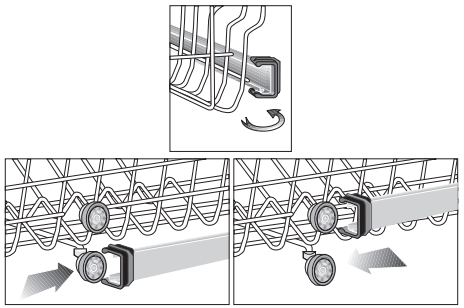

Crockery Holders:

- Down: two tiers of cups.
- Up: long-stemmed glasses.

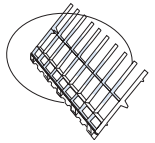

Lower rack

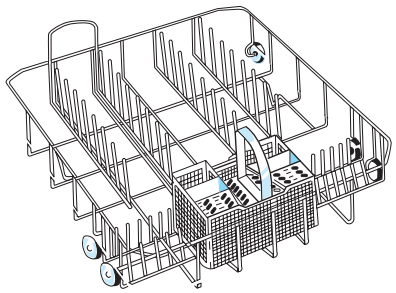

Plate Holder:

- The plate holder may be removed to increase available space.
- To remove the plate holder pull the handle up.
- To reposition the plate holder, insert it in its original position.

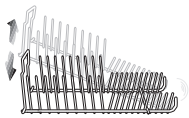

Cutlery Basket:

- Removable to gain space.